

## In This Package




Guardian



Rain Jacket



Remote Control

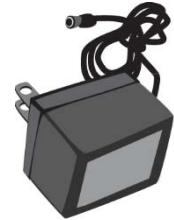


AC Adapter

## Getting Started

### 1. Remove the Back Cover




Push down on the top tab and remove the cover.

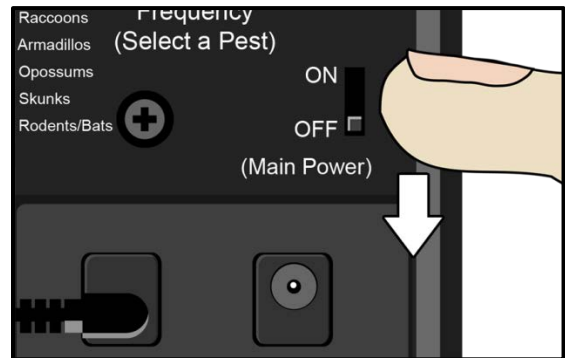


Make sure the **Main Power Switch** is "Off".

### 2. Set the Strobe Light

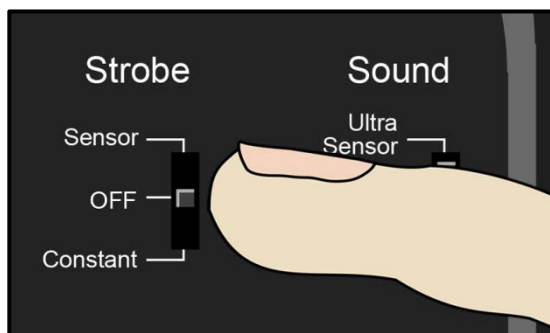

Switch the **Strobe Light** to one of the following settings:  
(Continued on next page)

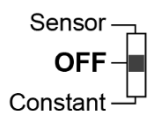


**What It Does:** Strobe will activate only when triggered by the motion sensor.


**Perfect For:** Large pests; saving battery

**Compatible With:** "Ultra Sensor" or "Alarm Sensor" sound settings.

### 3. Set the Sound

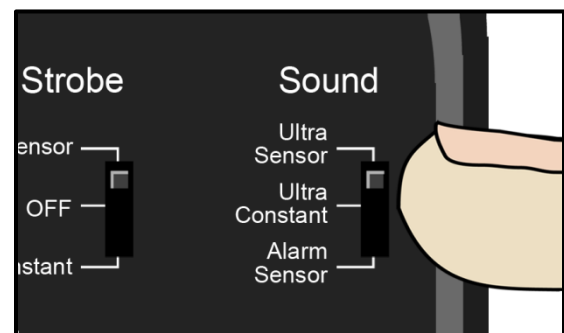


Switch the **Sound** to a setting that matches the Strobe option you picked in Step 2. (Example: If you set the Strobe to "Sensor" then you must choose a "Sensor" sound setting.)

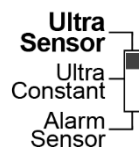


**What It Does:** Guardian emits ultrasonic sound when activated by the motion sensor.

**Perfect For:** Large pests; saving battery


**Compatible With:** "Sensor" or "Off" strobe settings

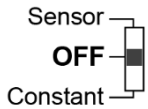


**What It Does:** Strobe is turned off  
**Compatible With:** Any sound setting

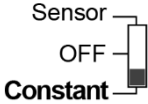

**What It Does:** Strobe will activate continuously. *AC Power Recommended.*  
**Perfect For:** Small pests such as rodents; nocturnal animals; situations where you don't know the pest's exact location  
**Compatible With:** "Ultra Constant" sound setting

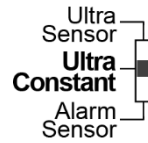


**What It Does:** Guardian emits ultrasonic sound continuously. *AC power recommended.*  
**Perfect For:** Small pests such as rodents; situations where you don't know the pest's exact location  
**Compatible With:** "Constant" strobe setting

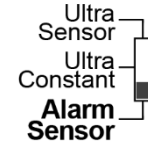

**What It Does:** Guardian emits a loud alarm sound when activated by the motion sensor. *This setting will override the Frequency Dial.*  
**Perfect For:** Large pests; personal safety; protecting property from intruders  
**Compatible With:** "Sensor" or "Off" strobe settings

#### 4. Set the Motion Sensor Dial

*Important: Perform this step only if you chose a "Sensor" setting in Steps 2 & 3. Otherwise, skip ahead to Step 5.*

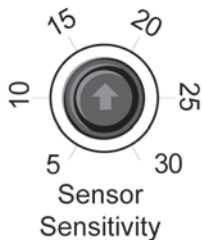

Setting 30 = about 100ft

The **Motion Sensor Dial** allows you to set how far away the motion sensor will work. Turn the dial to match the approximate distance you believe the pest will be away from the unit.

**Don't worry if you have to guess!** You will have a chance to test these settings and adjust as needed in Step 8.

#### 5. Set the Volume Dial

*Important: Perform this step only if you chose the "Alarm Sensor" setting in Step 3. Otherwise, set the Volume to 0.*



Not sure?  
Start at around 50

We recommend setting the **Volume Dial** at 50 to start out. Setting 100 is extremely loud; we recommend not starting there.

**Don't worry if you have to guess!** You will have a chance to test these settings and adjust as needed in Step 8.

#### 6. Set the Sound Frequency Dial

*Note: You only need to adjust this dial if you chose an Ultrasonic sound setting in Step 3 such as "Ultra Constant" or "Ultra Sensor". If you are using the "Alarm Sensor" sound setting, skip ahead to Step 7.*




Settings 0-4 will typically be audible to humans, while settings 5-7 should be inaudible. Here's a few of the more common settings:

- **Squirrels/Chipmunks:** Settings 3-5
- **Raccoons:** Settings 2-4
- **Bats:** Settings 6-7
- **Insects/Bugs:** Settings 1-4 will work but the sound will be audible. If you would rather not hear the sound at all, use 5-7.
- *\*Setting #8 is for factory testing only and should not be used.*

You may need to try several dial settings within the pest's range before finding the perfect one for your situation. You will have a chance to do this in Step 8.

## 7. Insert Battery/AC Adapter and Turn On

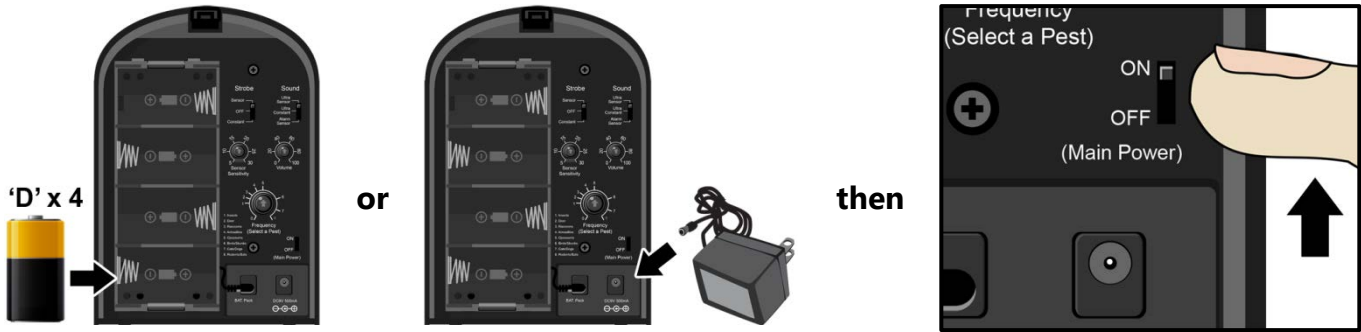

Insert 4 'D' Batteries or insert the AC Adapter into the AC plugin slot.

Turn the **Main Power Switch** to "On".

## 8. Test Your Settings

**IMPORTANT:** After testing a setting, you must **TURN THE GUARDIAN OFF FIRST** before making adjustments.

### **Motion Sensor**

*Test only if using a "Sensor" setting*

Walk in front of the unit at a distance of at least 5 feet away. Does the unit trigger? Adjust and repeat as necessary.

### **Sound Volume**

*Test only if using the "Alarm" setting*

When the Guardian emits the alarm sound, verify that the volume is to your liking. Adjust and repeat as necessary.

### **Sound Frequency**


*Test only if using an "Ultra" setting*

You may need to try several dial settings within the pest's range. Adjust and repeat as necessary.

## 9. Install and You're Done!

You can install the Guardian virtually anywhere, inside or outside. Make sure that the Guardian is turned on before installation. Choose between these easy options:

- Place the unit on any flat surface such as counter tops, window seals, ledges, shelves, patios, and more.
- Mount the unit using the **Mounting Holes** on the Back Cover. The most common places to mount the Guardian include fences, walls, and trees. Try to install the Guardian at the level of the pest's height.
- If you are installing the Guardian outside, we recommend covering it with the **Rain Jacket**.

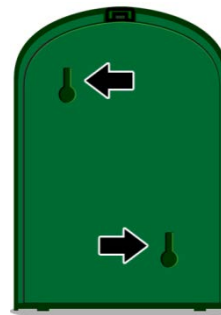

**Mounting Holes**



**Rain Jacket**

## Quick Settings for Common Pests

### **Bats in the Attic**

**Strobe:** Constant

**Sound:** Ultra Constant

**Frequency Dial:** 6-7

**To Install:** Place in attic or where you suspect the bats are entering the roof area.

### **Small to Medium-Sized Pests in the Yard**

**Strobe:** Constant or Off

**Sound:** Ultra Sensor / Constant

**Frequency Dial:** 2-7

**Motion Sensor:** Adjust to preference

**To Install:** Place near ground level for small pests. For larger pests, place at the body level of the pest

### **Squirrels/Raccoons in the Attic**

**Strobe:** Constant or Off

**Sound:** Ultra Constant

**Frequency Dial:** 3-5

**To Install:** Place in attic or crawl space depending on location of pest.

### **Personal Safety**

**Strobe:** Sensor

**Sound:** Alarm Sensor

**Volume:** 40-100

**Motion Sensor:** Adjust to preference

**To Install:** Place near the area you want to protect such as a hallway, doorway, yard area, RV, etc

## Remote Control

The remote control allows you to manually activate the Guardian from up to 75 feet away. Keep in mind that the Guardian must be turned on for the remote to work. The remote has two buttons: **Alarm** and **Ultra**.

**Alarm Button** – When pressed, the Guardian emits an audible alarm sound. This button is compatible with the Guardian's "Ultra Sensor" and "Alarm Sensor" sound settings. If instead the sound is set "Ultra Constant", the remote will not trigger the alarm sound.

**Ultra Button** – When pressed, this button will override the current sound setting on the Guardian and cause it to emit ultrasonic sound.

**Note:** If the Guardian is set to "Ultra Sensor" and is sounding off, the first time you push any button on the remote it will stop the "Ultra Sensor" sound. The second time you push the button, it will activate the Audible Alarm. To stop the alarm sound, simply push the **Ultra** button again.



## Using the Guardian as a Personal Safety Device

The Guardian™ can be used as a personal safety device to ward off intruders (humans and pests) from your property. We recommend using the Strobe Light on the "Sensor" setting and the Sound on the "Alarm Sensor" setting so that when motion is detected, the unit will activate both the Strobe Light and the Alarm Sound. Place the Guardian™ near doors, hallways or anywhere else in your home where you would like to detect motion.

## Specifications

|                            |   |
|----------------------------|---|
| Dimensions                 | 5" W x 7 ¼" H x 3 ½" D                                      |
| Sound (Alarm & Ultrasonic) | 5000 sq ft sound distance, 120dB (adjustable) Max, ±/-5dB   |
| Motion Sensor Distance     | 5 feet to 100 feet  |
| Activation Time            | Triggers for a duration of 7-9 seconds                      |
| Strobe Light               | 1 flash per second, 10 seconds total                        |
| Remote Control             | Activates from up to 75 feet (direct line of site required) |
| Battery (remote control)   | 12V / L1028 x 1 (included)                                  |
| Battery (Guardian)         | 1.5V / D Size x 4 (not included)                            |
| AC Adapter                 | AC 120V, 9V/600mA x 1                                       |

## Return Policy and Warranty

Don't worry, we've got you covered! Your Guardian™ purchase is backed by our 45 Day Money Back Guarantee and 1 Year Manufacturer's Warranty. For full details, please visit [www.goodlifecompany.com/returns](http://www.goodlifecompany.com/returns) or contact us using the information below.

## Contact Us

**Toll Free:** (800) 657-8214  
**Outside US:** (541) 245-4488

**Website:** [www.pestrepellerultimate.com](http://www.pestrepellerultimate.com)  
**Email:** [customerservice@goodlifellc.com](mailto:customerservice@goodlifellc.com)



© 2006 – 2013 Good Life®, LLC. Disclaimer: The Guardian™ is not a professional home security device although it can alert you to the presence of an intruder.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.